

# INSTALLATION GUIDE


1. Choose the surface you would like to install the Edge Guard on. Clean and dry the surface for maximum adherence.



2. Remove the film release liners from the corner pieces and attach them to the surface.




3. Measure the length between 2 corner pieces using a measuring tape.

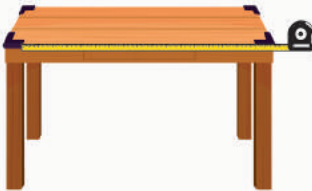


4. Cut the Edge Guard from the roll slightly bigger than the measured size, to ensure there would be no gap left.



5. Attach the double-side tape onto the piece you've cut. Make sure to attach it as close as possible to the edge of the inner side of the piece, so it will be harder to pull. Remove the film release liners.

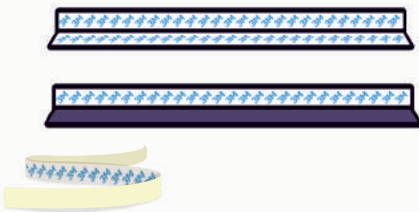

6. Attach the Edge Guard piece to the surface. Press the pieces against the surface to ensure it is completely adhered. It is recommended to install the edge guard in the evening to allow it to fully adhere over night.

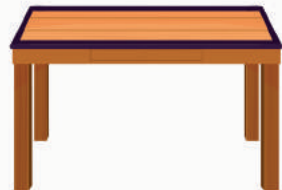

**We are sure you rocked it!**

If you need more help or clarifications, please DO NOT hesitate to contact us at any time - [contact@nurtureright.com](mailto:contact@nurtureright.com)

**Don't forget to register your warranty.**

For more instructions and removal tips please visit: [www.nurtureright.com](http://www.nurtureright.com)